


PoE Repeater Installation Guide

1. Disassemble the cable gland as shown below.



2. Verify continuity between the RJ45 receptacles.




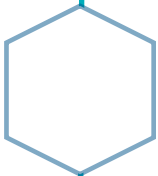

3. Terminate the Shielded RJ45.




3a.

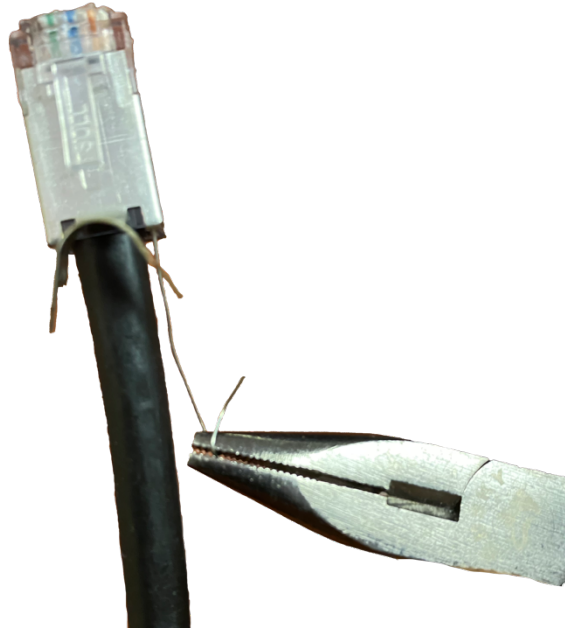

3b.



3c.

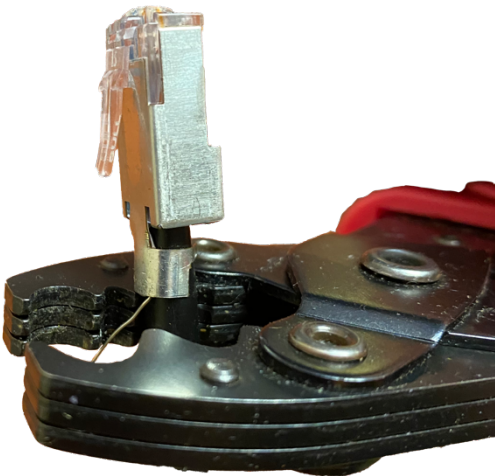


3d.



3e.




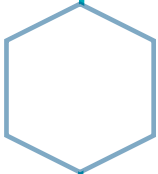

4. Feed the cable through the cable gland.



5. Plug the RJ45 into the PoE port, attach the cable gland to the Repeater, and tighten using the 27mm wrench. DO NOT OVERTIGHTEN. See appendix.

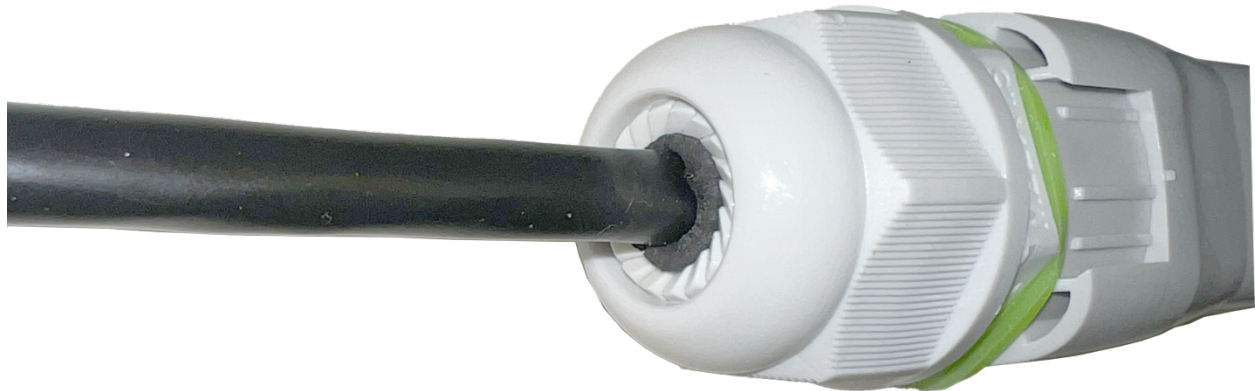

Repeater Seal Fitment Appendix

Correct



Ensure the seal fits evenly into the clamping nut.



After tightening, the seal should clamp evenly around the cable.



Washer seal position.

Incorrect



Seal is not aligned.



No seal around cable.



Washer seal overtightened and exposes inside wall.